



PENTAIR® PP4RO-75 UNDERSINK REVERSE OSMOSIS SYSTEM INSTALLATION AND OPERATION MANUAL

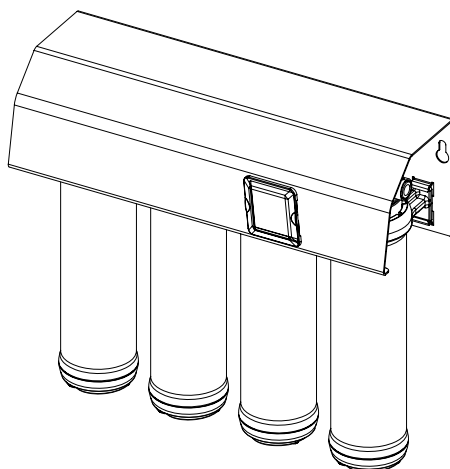


TABLE OF CONTENTS

OPERATING SPECIFICATIONS	2
GENERAL PRECAUTIONS	3
HOW REVERSE OSMOSIS (RO) WORKS	4
INSTALLATION	4
OPTIONAL INSTALLATION	10
TESTING THE PP4RO	11
WHEN TO CHANGE THE CARTRIDGES	11
CHANGING THE CARTRIDGES	11
TROUBLESHOOTING	13
MAINTENANCE	15
SUGGESTED LIST PRICE REPLACEMENT CARTRIDGES ..	15
REPLACEMENT PARTS	15
PERFORMANCE DATA	16
CALIFORNIA PROPOSITION 65 WARNING	16

OPERATING SPECIFICATIONS

⚠ WARNING: Before installing the system, make certain your water supply complies with the following operating specifications. Failure to do so may reduce the effectiveness of the system and will void the warranty. Consult your local water treatment utility or a certified water testing lab to determine the quality of your water and use the table below to record your results for future reference.

PP4RO-75 Specifications		Your Water
Pressure Range:	40–100 psi (2.8–6.9 bar)	
Temperature Range:	40–100°F (4.4–37.8°C)	
Total Dissolved Solids	< 2000 ppm	
Maximum Hardness* †:	10 gpg (171 mg/L)	
Sulfide, Iron and Manganese †:	< 0.1	
Chlorine in Water Supply:	< 2 ppm	
Water Supply pH Limits:	3–11	
Turbidity:	5 NTU Max.	
Date of Purchase:		

* If the hardness of your water is above 10 gpg (171 mg/L), lime scale will build up rapidly on the membrane inside of the RO membrane cartridge. Scale buildup will plug the RO membrane cartridge and make the system ineffective. We do not recommend the PP4RO to be used with water in excess of 10 gpg (171 mg/L) hardness, unless the water is softened prior to the reverse osmosis system.

† See your local dealer or water treatment specialist to reduce these substances in your water.

PP4RO-75 Dimensions

System Dimensions:	13 H x 15 W x 4.75 inches D (330 x 381 x 120.6 mm)
Tank Dimensions:	14.5 H x 11 inches Dia (368 x 279 mm)
System Weight:	23 lbs (10.4 kg)
Tank Capacity:	3.2 gal (12.1 L)

Tools Required

- Hand or Electric Drill
- 2 Adjustable Wrenches
- File
- Pencil
- Needle-nose Pliers
- Utility Knife or Tube Cutter (for plastic tubing)
- Phillips Screwdrivers
- Towel
- Safety Glasses
- Tape Measure
- Drill Bits: 1/8-inch, 1/4-inch and 3/8-inch

Optional Materials

(For sinks without extra hole for faucet)

- Hand or Electric Drill
- Plumber Tape
- Drill Bits: 1/4-inch and 3/4-inch
- Center punch
- Respirator
- 1-3/8 inch Bi-metal or Carbide Tipped Hole-saw

NOTE: All tools listed will not be necessary for installation. Read installation procedures before starting to determine required tools.

Parts Included

- Head Assembly
- Screws for mounting
- Lead-free air gap drinking water faucet
- Silicone grease
- Plumber Tape
- Faucet Adapter
- TDS Test Kit
- TDS Monitor with Battery CR2032
- Filter Cartridges:
PW-S2500R Cartridge
PW-C5000R Cartridge
PW-RO75R Cartridge
PW-C2500R Cartridge
- Drain Saddle Valve
- Water Supply Adapter
- 1/4-inch Plastic Tubing (white, red and green)
- "T" Fitting
- Sticker
- Quick-connect Fitting
- Nitrate/Nitrite Test Kit
- 3/8-inch Plastic Tubing (red and blue)

GENERAL PRECAUTIONS

⚠ WARNING: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

⚠ WARNING: The PP4RO contains a replaceable RO membrane cartridge that is critical to the efficiency of the system. Replacement of the RO membrane cartridge should be with one of identical specifications, as defined by the manufacturer, to assure the same efficiency and contaminant reduction performance.

⚠ WARNING: The PP4RO contains a replaceable RO membrane cartridge, critical for the effective reduction of total dissolved solids. Product water should be tested periodically to verify that the system is working properly.

⚠ WARNING: The PP4RO is acceptable for treatment of influent concentrations of no more than 27 mg/L nitrate and 3 mg/L nitrite in combination measured as N and is certified for nitrate/nitrite reduction only for water supplies with a pressure of 40 psig (280 kPa) or greater.

⚠ WARNING: The PP4RO shall only be used for arsenic reduction on chlorinated water supplies containing detectable residual free chlorine at the system inlet. Water systems using an in-line chlorinator should provide a one-minute chlorine contact time before the unit.

⚠ WARNING: The PP4RO will not protect against disease-causing bacteria or remove naturally-occurring harmless bacteria.

CAUTION The PP4RO must be protected against freezing which can cause the filter housing to crack, resulting in water leakage.

CAUTION Turn off water supply to head without cartridge if it must be left unattended for an extended period of time.

CAUTION Do not use electrical heating tape on this unit.

NOTE: Substances listed as reduced are not necessarily in your water. System must be maintained according to manufacturer's instructions, including replacement of filter cartridges.

NOTE: Your water must be within required limits for satisfactory operation. If not, the RO membrane cartridge's life may be shortened and your warranty will be voided (see Operating Specifications).

NOTE: Install on cold water line only.

NOTE: Do not install where system will be exposed to direct sunlight.

NOTE: Make certain that installation complies with all state and local laws and regulations.

NOTE: The filter cartridges and RO membrane cartridge included with the system have limited service lives. Changes in taste, odor, and color of the filtered water indicate that the cartridges and/or membrane should be replaced. The filter cartridge and RO membrane cartridge icons on the faucet base will blink a GREEN color when there is water flow through the drinking water faucet, indicating all systems are good. If the Filter Cartridge or RO membrane cartridge icon(s) blink RED when the drinking water faucet is turned on, the respective cartridge(s) need changing.

NOTE: During extended periods of non-use (such as during a vacation), remove the membrane cartridge and the filter cartridges from the unit and place them in a sealed plastic bag. Store the cartridges in the refrigerator for future use. When re-starting the unit, replace all cartridges and flush per instructions.

NOTE: If the PP4RO stands for more than 2 to 3 days without being used, the storage tank should be emptied.

NOTE: Use only plumber tape without adhesive backing to seal joints. Do not use pipe compound ("pipe dope"), sticks, or similar compounds with this unit; they contain petroleum derivatives which can cause crazing and cracking of the plastic in the filter housing.

NOTE: Use only soap and water to clean components.

NOTE: Do not use aerosol sprays (bug spray, cleaning fluids, etc.) near the PP4RO. They contain organic solvents which will cause crazing and cracking of the plastic in the filter housing.

NOTE: After prolonged periods of non-use, such as a vacation, it is recommended that the system be flushed thoroughly. Let water run for 2 to 3 minutes before using.


NOTE: Do not use a torch near the unit.

HOW REVERSE OSMOSIS (RO) WORKS

The PP4RO uses a semi-permeable membrane to reduce dissolved salts, improving the taste and odor of your water. The RO membrane cartridge contains multiple layers of micron-thin film wound around a hollow center core. Water molecules can pass through the cartridge, while dissolved salts are rejected.

Your household water supply is pre-filtered to reduce dirt and chlorine that may foul the membrane. The RO membrane cartridge separates this pre-filtered water into PRODUCT WATER and REJECT WATER. Your household water pressure forces water through the membrane within the RO membrane cartridge, and into the storage tank. This is product water. Dissolved salts cannot pass through the membrane and are sent to the drain as reject water. When you open the faucet, product water (permeate) is drawn from the storage tank through a post-polishing filter. The post-polishing filter takes out any remaining taste or odor in the water and provides you and your family with cleaner, great-tasting water.

The PP4RO also features an auto shut-off valve, which shuts off the system once the pressure in the storage tank reaches 2/3 of the incoming water pressure (your household water pressure). When you open the faucet to draw water from the storage tank, the pressure inside the tank drops and the auto shut-off valve opens. The system then begins to operate, replenishing the water you took from the storage tank. Depending on the system's efficiency, for each gallon of water produced, up to 7 gallons are discharged as reject water. The storage tank can hold up to 3.2 gallons (12.1 L) of water at a time, more than enough for the average family's drinking and cooking needs.

NOTE: When used under operating conditions specified on page 1 of this manual, the RO membrane cartridge of the PP4RO should last 12–24 months. The RO membrane cartridge will need to be replaced when the RO membrane cartridge icon  on the faucet base blinks RED as water is running through the drinking water faucet. The precise life span of the PP4RO's RO membrane cartridge will depend on the quality of the water entering the system, and the frequency with which you use it. Frequent use prevents the dissolved salts from building up on the membrane as scale. The more water the system is required to produce, the longer the membrane will last. You may wish to find a variety of uses for your PP4RO system in order to prolong the life of the membrane. For optimum RO membrane cartridge life, make sure you change the filter cartridges when the filter cartridge icon is blinking RED.

NOTE: When the filter cartridges (S2500R and/or PW-C2500R) are changed, the reset button, located in the battery compartment of the system, needs to be pressed and held for five seconds. When the unit is properly reset by pressing the reset button, the RED light on the circuit board will blink. Doing so will reset the times for all of the cartridges.

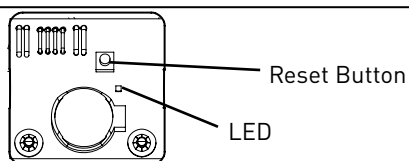


Figure 1

INSTALLATION

NOTE: Please read all instructions, specifications, and precautions before installing and using your PP4RO system.

NOTE: The PP4RO may be installed under a sink or in the basement.

NOTE: The PP4RO is installed vertically.

NOTE: Numbered diagrams correspond with numbered steps.

NOTE: For standard installation on 1/2-inch 14 NPS threads (most common thread on kitchen faucets) cold water line.

1. Installing the Water Supply Adapter

The supply adapter fits 1/2-inch 14 NPS supply threads. If local codes permit, it may be used to connect the filter system to the cold water supply line. If local codes do not permit the use of the supply adapter, alternate connectors can be obtained from your local retailer.

- Turn off cold water supply line. If cold water line does not have a shut-off valve under the sink, one should be installed.
- Turn on the cold water faucet and allow all water to drain from line.
- Disconnect cold water line from 1/2-inch 14 NPS threaded stub on bottom of main faucet.
- Apply plumber tape to threads on faucet stub.
- Screw the water supply adapter to the threaded faucet stub as shown.
- Using the nut that previously connected the cold water line to the faucet, screw the cold water line to the male supply adapter threads.

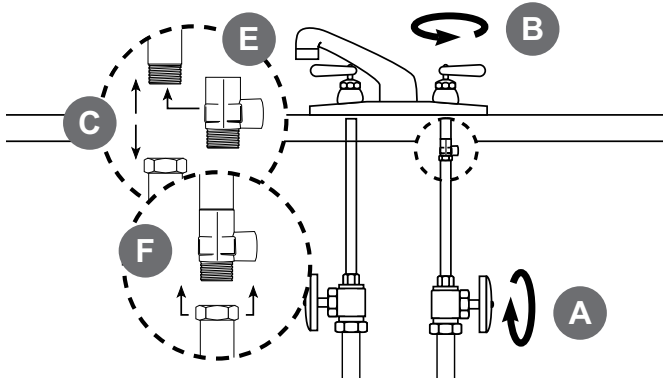


Figure 2

INSTALLATION *CONTINUED*

2. Selecting the Faucet Location

NOTE: The drinking water faucet should be positioned with function, convenience, and appearance in mind. An adequate flat area is required to allow faucet base to rest securely. The faucet fits through a 1-3/8 inch hole. Most sinks have pre-drilled 1-3/8 inch or 1-1/2 inch diameter holes that may be used for faucet installation. If these pre-drilled holes cannot be used or are in an inconvenient location, it will be necessary to drill a 1-3/8 inch hole in the sink to accommodate the faucet.

⚠ WARNING: This procedure may generate dust which can cause severe irritation if inhaled or come in contact with the eyes. The use of safety glasses and respirator for this procedure is recommended.

⚠ WARNING: Do not attempt to drill through an all-porcelain sink. If you have an all-porcelain sink, mount the faucet in pre-drilled sprayer hole or drill through countertop next to sink.

⚠ WARNING: When drilling through a countertop, make sure the area below the drilled area is free of wiring and piping. Make certain that you have ample room to make the proper connections to the bottom of the faucet.

⚠ WARNING: Do not drill through a countertop that is more than 1 inch thick.

⚠ WARNING: Do not attempt to drill through a tiled, marble, granite or similar countertop. Consult a plumber or the countertop manufacturer for advice or assistance.

- Line bottom of sink with newspaper to prevent metal shavings, parts, or tools from falling down drain.
- Place masking tape over the area to be drilled to help prevent scratches if drill bit slips.
- Mark hole with center punch. Use a 1/4-inch drill bit for a pilot hole.
- Using a 1-3/8 inch hole saw, drill a hole completely through the sink. Smooth the rough edges with a file.

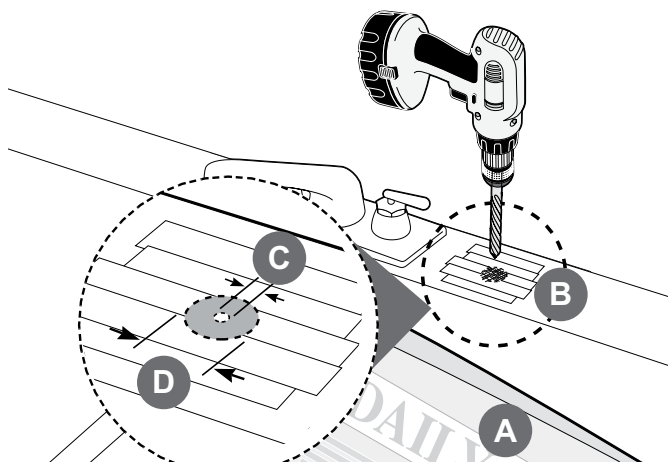


Figure 3

3. Mounting the Faucet

- Loosen stem-nut on faucet, remove metal "C" disc (if attached).
- Attach large diameter 3/8-inch (RED) drain tube to barb fitting at the faucet base. This tube should be long enough to reach the drain clamp in Step 7.
- Locate the 1/4-inch red brine tube from the right side of the system head assembly. Route the tube through the faucet base and connect to small barb on the faucet. Make certain that the tube is not kinked or stressed once the head assembly is mounted.
- Slide the cartridge life indicator base and gasket onto the faucet by threading both drain tubes through the hole.
- Slide chrome plate and black rubber washer onto faucet by threading both drain tubes and the indicator base wire through the holes on the plate and washer.
- Slide white extension onto long threaded section of faucet. Open end of extension should come in contact with base of faucet.
- Slide lock washer up threaded section and thread stem nut on. Do NOT tighten nut at this time.
- Apply 3-5 wraps of plumber tape to faucet stem. Screw quick connector onto end of threads.
- Wet end of 3/8-inch blue tube. Push into bottom of connector. Tug gently to be sure connection is complete. This tube should be long enough to reach the top right side of the RO Assembly.
- Holding the faucet, feed the three tubes and electrical connection through the hole in the sink. Position the faucet handle at a desired location.
- Center the faucet and slip "C" disc between the white extension and the bottom of the counter or sink. Tighten the stem nut with a wrench until it is tight.

NOTE: Do not overtighten the lock nut. Snug down and tighten until faucet is secure.

- Firmly insert goose-neck spout into faucet base.

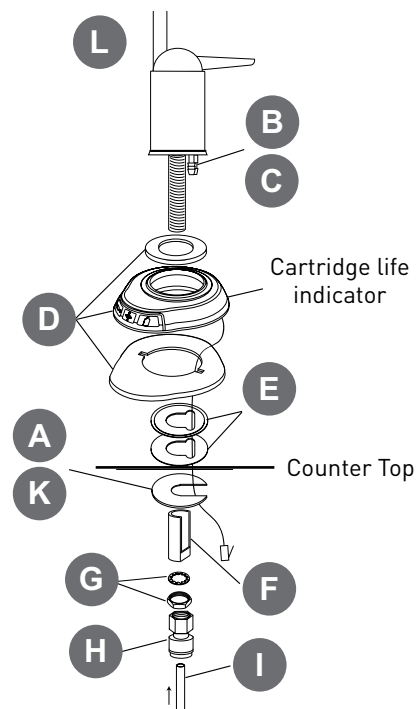


Figure 4

INSTALLATION *CONTINUED*

4. Mounting the System

CAUTION The filter head assembly should be mounted on a stud or firm surface. The mounting bracket will support the weight of the cartridges and help prevent strain on the water lines.

- A. Select location under sink or in basement where unit is to be mounted. The head assembly is mounted in a vertical position.
- B. When mounting the PP4R0-75 the top of the head must be 15-1/2 inches above the nearest obstacle (floor of the cabinet). Two screws are supplied to mount the head. Measure up from the floor of the cabinet 14-1/2 inches. The two screws will be 14 inches apart and level. Screw the two screws into the wall. Leave a gap between the screw head and the wall of 1/8 inch. The backside of the system head has two slots that will fit over the screw heads and slide down to lock.

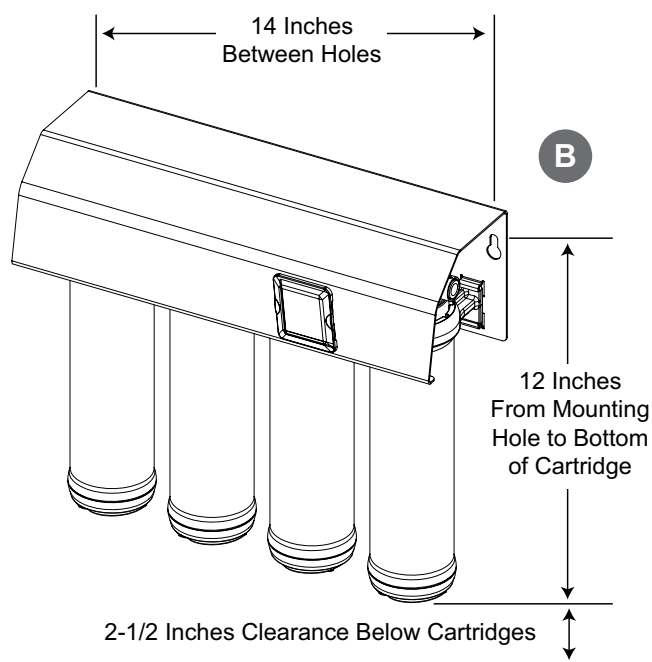



Figure 5

- C. Remove paper tab from battery to activate cartridge life indicator. Press the reset button to start 6 month timer. The LED will flash red. When 6 months has passed the change cartridge indicator light  on the life monitor will turn red.

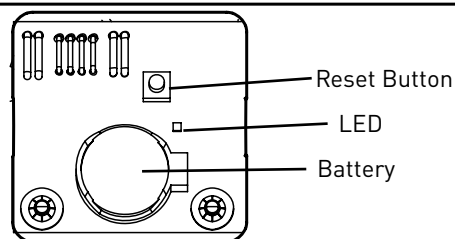


Figure 6

INSTALLATION *CONTINUED*

5. Connecting the Faucet

CAUTION Water supply to the tee should have a separate shut-off valve. If it does not, a separate shut-off should be installed.

- Locate the 3/8-inch blue tubing from the faucet and place a mark 3/4 inch from the end of the tubing. Moisten the end of the tubing with water and insert into the blue quick-connect fitting on the head assembly until the mark is flush with the quick-connect fitting.
- Gently pull back on the tubing to ensure it is connected properly. If the tubing comes out of fitting, cut a small section off of the tubing and reconnect.

NOTE: Tubing may be quickly and easily removed from the fitting if necessary. First, turn off the water supply to the filter. Open faucet, then press in the collet around the fitting while pulling the tubing with your other hand.

- Route the cartridge life indicator cable to the system. Plug it into the wire with the female connector, at the top of the unit. It will only enter one way. Ensure that cable routing includes a drip loop to prevent potential water leaks from entering the cable connection on top of the system.

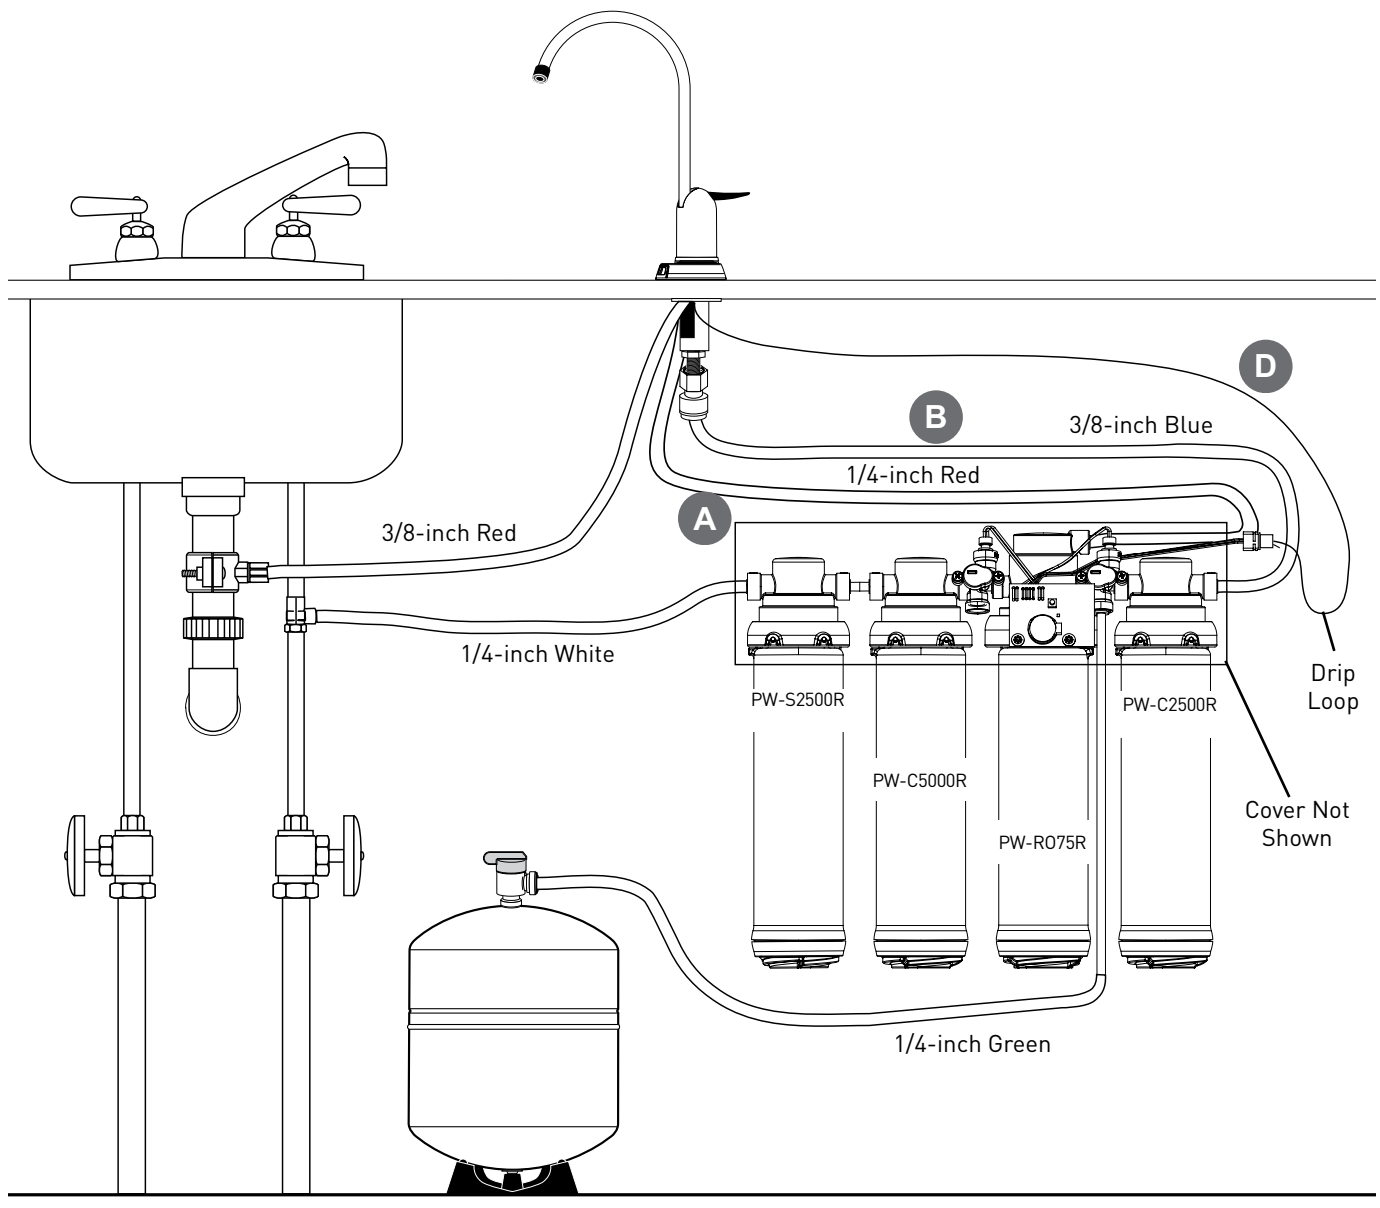


Figure 7

INSTALLATION CONTINUED

6. Connecting the Water Supply Adapter

- Determine the length of 1/4-inch white plastic tubing needed to connect the inlet (white collet) on the left side of the filter with the water supply adapter. Be sure to allow enough tubing to prevent kinking and cut the tubing squarely. Place a mark 5/8 inch from the end of the tubing.
- Wet tubing with water and insert into water supply adapter 5/8 inch until mark is flush with fitting. Repeat inserting other end of tubing into inlet of the head assembly.

7. Installing the Drain Clamp

NOTE: If you have a single-basin sink with a disposal unit, call Technical support at 1-800-279-9404 for options.

NOTE: Before installing the drain clamp, check the drainpipes under the sink for corrosion. Corroded pipes should be replaced before continuing with installation.

- Attach the drain clamp to a vertical section of the drainpipe, about 6 inches above the trap. Make sure the opening on the drain clamp is facing towards the drinking water faucet.
- Using the fitting hole for the drain clamp as a guide, drill a 1/4-inch hole through one side of the drainpipe.
- Remove the drain clamp from the drainpipe and enlarge the hole with a 3/8-inch drill bit. Use a file to remove rough edges from the drilled hole.
- Make sure the black rubber gasket is adhered to the inside of the drain clamp and place the drain clamp assembly over the drilled hole. Look through the hole and position the clamp so that the center of the clamp hole is slightly higher (about 1/16 inch) than the center of the drilled hole. (See Figure 10). Tighten the clamp securely.
- Screw the plastic compression nut onto the drain clamp until hand-tight.

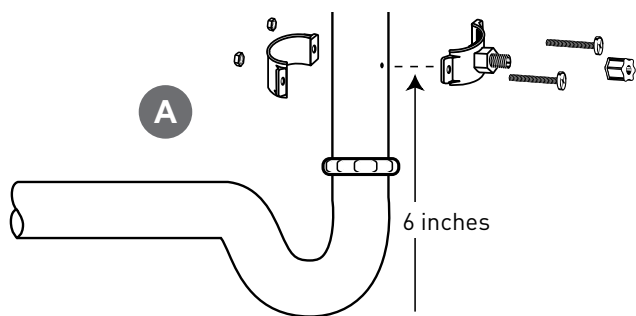


Figure 8

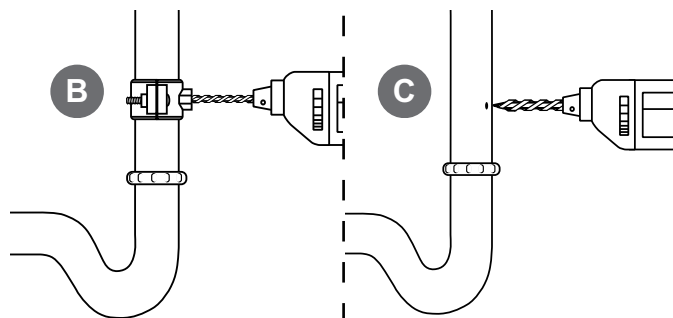


Figure 9

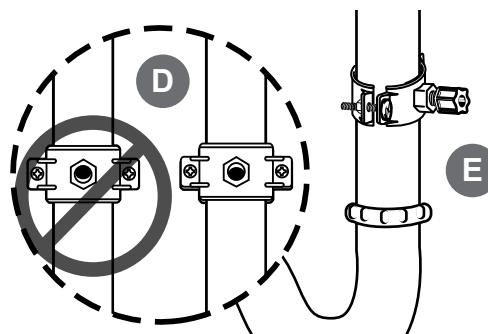


Figure 10

8. Connecting the Faucet to the Drain

NOTE: This is a gravity drain line. Any loops, kinks or sharp bends must be eliminated before proceeding. Failure to create a straight line to the drain may result in reject water leaking through the air gap in the faucet onto the counter top and below the faucet.

- Align the 3/8-inch red tubing from the faucet with the compression nut on the drain clamp. Create as straight a path as possible with the tubing. Cut the tubing squarely below the nut and remove the internal and external burrs.
- Loosen the compression nut two complete turns. Insert the tubing into the nut until it stops. Tighten with fingers, then tighten 1 to 2 turns with a wrench.

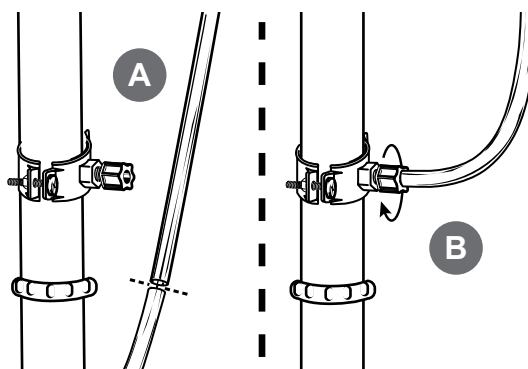


Figure 11

INSTALLATION *CONTINUED*

9. Installing the Cartridges

The cartridges are identified by the color of the label and the model number.

Cartridge #1 = PW-S2500R

Cartridge #2 = PW-C5000R

Cartridge #3 = PW-R075R

Cartridge #4 = PW-C2500R

Install the cartridges in order. If the cartridges are installed out of order the system will not filter correctly.

- Slide the cartridge into the head until it can go no further.
- Twist the cartridge 1/4 turn clockwise until it snaps into place. Gently pull the cartridge straight out to ensure the cartridge is locked into place.

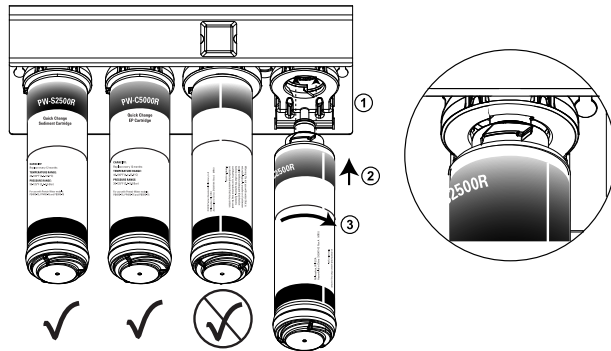


Figure 12

10. Connecting the Storage Tank to the System

CAUTION When tank is full, it weighs approximately 35 pounds. Provide ample support under the tank.

- Thread the tank valve onto the top of the tank opening by turning it clockwise until snug.
- Locate the green tubing and a mark 3/4 inch from each end. Moisten one end of the green tubing with water and insert with a twisting motion into the free port of the tank valve until the 3/4 inch mark is flush with the quick-connect fitting.
- Install free-end of green tubing to green quick-connect fitting or elbow located between the 3rd and 4th cartridges.

NOTE: Do not cut green tube. This line should be left at the pre-cut length for future service.

CAUTION Make certain head assembly is firmly attached to wall to prevent it from falling and possibly becoming damaged.

NOTE: Use caution not to bend or pinch the tubing behind the system while attaching to mounting screws.

NOTE: The pressurized storage tank has capacity of 3.2 gallons. The tank's air pressure is factory set at 5 to 7 psi when tank is empty.

11. Putting the System Into Operation

NOTE: The post-polishing filter may contain fine black carbon particles. These fines are harmless, but may make the water appear gray in color. The carbon fines are flushed from the system with the first tank full of water.

NOTE: The PP4RO system does not produce a high volume of water on demand as an ordinary filter does. Water is produced at a slow, drop-by-drop rate. The system requires about 3 hours to fill the storage tank. As water is taken from the tank, the system automatically starts the cycle of replacing the water and then stops water production when the tank is full.

- Make sure cold water faucet is "off".
- Make sure tank valve is in the open position.
- Slowly turn on cold water supply.
- Open the faucet to turn on flow. Let the faucet run/drip for 12 hours, then close it.
- Allow 3 hours for the tank to fill. Continue to periodically check the installation for leaks. After the storage tank is filled, open the faucet to flush the post-filter cartridge (on the right side of the filter housing). Allow 4 to 5 minutes for all of the water to drain from the tank.
- Close faucet and allow tank to fill.

CAUTION Visually check the entire system for leaks. If a leak is present, see TROUBLESHOOTING.

NOTE: Initially, the water may appear cloudy. This is a result of air trapped in the post-filter cartridge. It is not harmful and will disappear in a matter of minutes. It may take up to a week after installing a new post-filter cartridge for the trapped air to dissipate.

- Repeat step E four times.

The system is ready for operation. You can now enjoy quality water from the PP4RO-75.

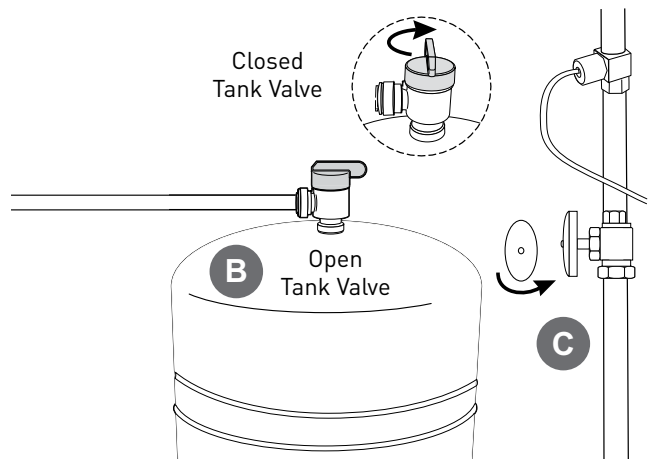


Figure 13

OPTIONAL INSTALLATION

Connecting The PP4R0-75 To Refrigerator Icemaker/Water Dispenser

CAUTION If you are connecting the PP4R0 to your refrigerator/icemaker with initial system installation, wait to turn on the icemaker until the Post- Filter Cartridge (on the right side of the filter housing) has been flushed according to Step 11.

CAUTION Use plastic tubing and fittings. Do not use copper tubing or brass fittings.

NOTE: For optimum performance, it is recommended that the distance between the PP4R0 and the refrigerator icemaker/water dispenser be no greater than 10 feet (3 m). At distances greater than 10 feet, the water pressure from the system may not be adequate to deliver water to the refrigerator.

Materials Required

(available from your local hardware store)

- 3/8-inch x 3/8-inch x 3/8-inch (9.5 x 9.5 x 9.5 mm) compression or quick-connect tee.
 - 3/8-inch (9.5 mm) polyethylene tubing (maximum length of 10 feet [3 m] recommended)
 - Shut-off valve
- A. Turn off icemaker and refrigerator water supply. Consult manufacturer's guidelines.
 - B. Close tank valve (on top of storage tank).
 - C. Turn off water to the system at the cold water supply.
 - D. Open drinking water faucet to relieve pressure.
 - E. Locate blue tubing leading to your drinking water faucet. Cut and insert the 3/8-inch x 3/8-inch x 3/8-inch (9.5 x 9.5 x 9.5 mm) compression or quick-connect tee into the blue tubing. Consult manufacturer's guidelines before installing the tee connection.

NOTE: When cutting the blue tubing, you may experience some water leakage.

- F. Using a length of 3/8-inch polyethylene tubing, connect the icemaker/dispenser line with the free port on the compression tee.
- G. The shut-off valve should be installed as close to this port of the tee as possible. Shut-off valve should be installed in the OFF position. Consult manufacturer's guidelines before installing the shut-off valve.
- H. Completely open cold water supply (until it comes to a stop).
- I. Open tank valve.
- J. Turn off the drinking water faucet.
- K. Open shut-off valve at the tee connection.
- L. Turn on ice maker. Consult manufacturer's instructions.
- M. Check for leaks and tighten connections if necessary.

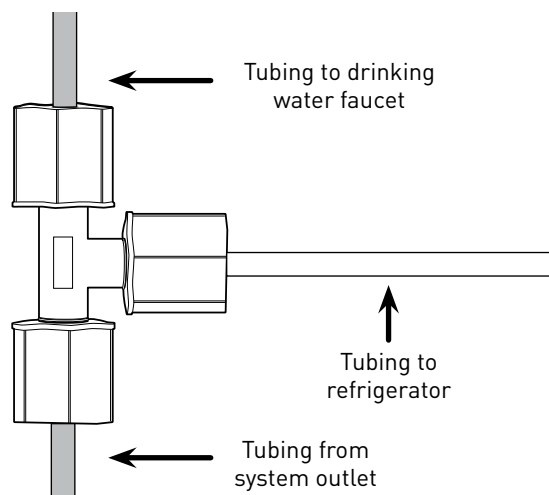


Figure 14

TESTING THE PP4R0

Meanings of Icon Lights on Drinking Water Faucet Base


The PP4R0 is equipped with a monitor that checks the Total Dissolved Solids (TDS) that the system is reducing. This allows the user to see the quality of the water that the system is producing. When the RO membrane cartridge icon blinks green as water flows through the faucet, the membrane is functioning optimally. When the RO membrane cartridge icon blinks RED as water flows through the faucet, the RO membrane cartridge needs to be changed.

Total Dissolved Solids (TDS) Test

NOTE: Under NSF/ANSI Standard 58, it is highly recommended that you (the consumer) have your water tested at least every 6 months to verify that your system is performing satisfactorily.

Sampling Instructions:

Sampling instructions are included with the Total Dissolved Solids (TDS) Test Kit. If the TDS Test Kit is missing from your unit, please call Customer Support at 1-800-279-9404 for a replacement.

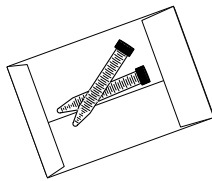

Total Dissolved Solids Test Kit

Figure 15

Nitrate/Nitrite Test Kit

A Nitrate/Nitrite Test Kit is included with this unit and is designed to indicate nitrate/nitrite levels in the drinking water. Test the water monthly. The current EPA Maximum Contaminant Level (MCL) for Nitrate as Nitrogen (N) is 10 mg/L or 10 ppm. The current EPA maximum contaminant level (MCL) for Nitrite as Nitrogen (N) is 1mg/L or 1ppm. Results showing any nitrate breakthrough should be followed up with a laboratory analysis of the water.

⚠ WARNING: Consult with your doctor to see if you or your family should drink water with the nitrate/nitrite levels found in your water.

Testing Instructions:

Testing instructions are included with the Nitrate/Nitrite Test Kit. If the Nitrate/Nitrite Test Kit is missing please call 1-800-279-9404 for replacement.

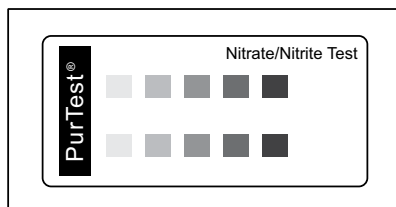


Figure 16

WHEN TO CHANGE THE CARTRIDGES

The life of the cartridge depends on the water volume used and the substances in the water. Normally, cartridges should be changed at intervals of 6 months. Replace the cartridge sooner if the water pressure at the faucet begins to drop noticeably or if you notice changes in the taste, color, or flow of the filtered water.

CHANGING THE CARTRIDGES

Materials Needed

- Replacement Cartridges:
 - PW-S2500R Cartridge
 - PW-C5000R Cartridge
 - PW-R075R Cartridge
 - PW-C2500R Cartridge

The pre-filter and post-filter cartridges need to be changed when the water pressure at the faucet begins to drop noticeably, or if there are changes in taste, color or flow of the filtered water. All cartridges should be changed at the same time. The cartridges are color coded to indicate which location they are installed into.

1. Changing the Filter Cartridges

NOTE: Only the replacement cartridges listed can be used with this system. Failure to use recommended replacement cartridges will void your warranty.

- Place a small pan or towel under the PP4R0 to catch any water that may drip.
- Twist the pre-filter cartridge (on the left side of the filter housing) counter-clockwise for a 1/4 of a turn, and pull the cartridge out of the system. If the system has any significant leaks, see Troubleshooting.
- Push the new cartridge into the head until it can go no further.
- Twist the cartridge 1/4 turn clockwise until it snaps into place.
- Gently pull the cartridge straight out to ensure the cartridge is locked into place.
- Repeat for all other cartridges.
- Turn on water and check for leaks. If leaks are found, see Troubleshooting.

NOTE: The post filter cartridge may contain carbon fines (very fine black powder). These will be released during your initial flushing.

- Flush water through filter for 5 minutes to remove carbon fines. Check for leaks again before leaving installation.
- Press the reset button located in the battery compartment for five seconds. If this is not done, the icon on the faucet base will continue to blink red. When the unit is reset by pressing the reset button, all of the icons in the faucet base will blink on and off three times. Doing so will reset the time and flow usage for the filter cartridges.
- Allow the tank to fill.

CHANGING THE CARTRIDGES *CONTINUED*

2. Changing the RO membrane cartridge

NOTE: Only use the RO-75GP replacement RO membrane cartridge. Failure to use the recommended replacement cartridge will void your warranty.

The RO Membrane Cartridge Icon  will normally blink green when the drinking water faucet is turned on, indicating the RO Cartridge is operating efficiently (Figure 17).

The RO membrane cartridge needs to be changed when the RO Membrane Cartridge Icon on the faucet base blinks RED as water is running through the drinking faucet base. The symbol will continue to blink RED until it is replaced.

- Turn system faucet and tank valve off.
- Place a small pan or towel under the PP4RO to catch any water that may drip.
- Twist the RO membrane cartridge (third cartridge) counter-clockwise for a 1/4 of a turn, and pull the cartridge straight out of the system. If the system has any significant leaks, see Troubleshooting.
- Align the alignment tab, on the top of the new cartridge with the alignment groove, in the head assembly
- Push the cartridge into the head until it can go no further
- Twist the cartridge 1/4 turn clockwise until it snaps into place.
- Gently pull the cartridge straight out to ensure the cartridge is locked into place.
- Turn on water, open tank and check for leaks. If leaks are found, see Troubleshooting.
- Allow the tank to fill.

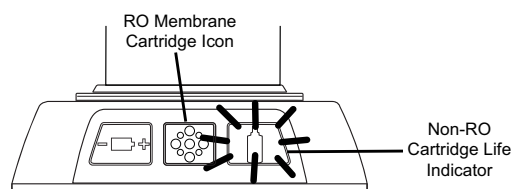


Figure 17

3. Flushing the RO membrane


NOTE: The PP4RO system does not produce a high volume of water on demand as an ordinary filter does. Water is produced at a slow, drop-by-drop rate. The system requires about 3 hours to fill the storage tank. As water is taken from the tank, the system automatically starts the cycle of replacing the water and then stops water production when the tank is full.

- Make sure system faucet is off.
- Make sure tank valve is in the open position.
- Slowly turn on cold water supply.
- Open the faucet to turn on flow. Let the faucet run/drip for 12 hours then close it.
- Allow 3 hours for the tank to fill. Continue to periodically check the installation for leaks. After the storage tank is filled, open the faucet to flush the post-filter cartridge (on the right side of the filter housing). Allow 4 to 5 minutes for all of the water to drain from the tank. Close faucet and allow tank to fill.

CAUTION Visually check the entire system for leaks. If a leak is present, see Troubleshooting.

- Repeat step E four times.

4. Cartridge Life Indicator and changing battery

- The cartridge life indicator  features a 6-month time signal and a low battery signal. When the 6-month indicator lights the three filter cartridges should be changed.
- After replacing the cartridges the reset button is pushed and held for 5 seconds. The LED on the circuit board next to the reset button will flash red several times.

NOTE: The battery should be changed annually or when the low battery signal appears.

- To change battery, use a small screwdriver to push on metal spring to release battery. Snap in new battery with number showing.

NOTE: Use replacement battery type CR2032.

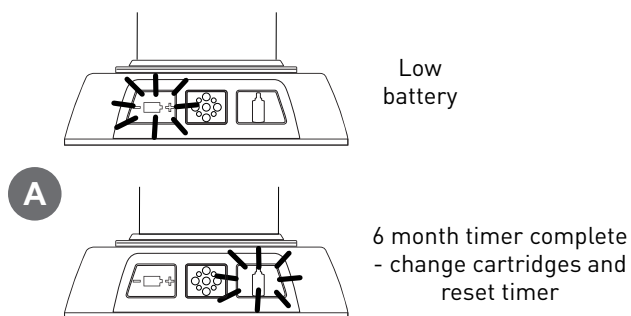


Figure 18

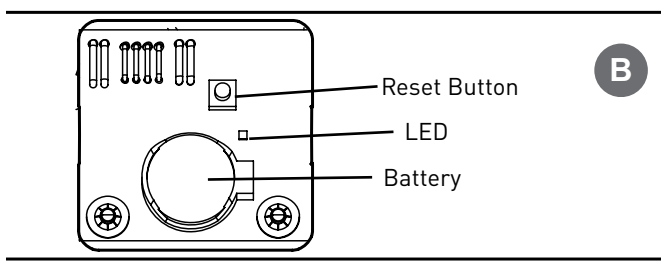


Figure 19

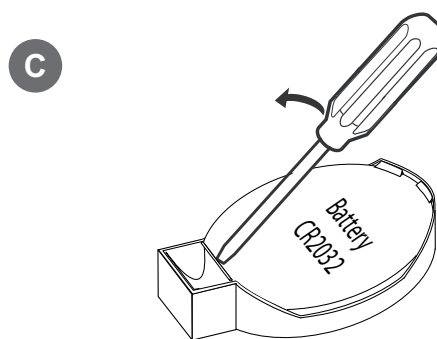


Figure 20

TROUBLESHOOTING

Leaks on Supply Adapter Connection

1. Turn off water supply valve and turn on drinking water faucet to release pressure in system.
2. Loosen leaking threaded fitting on supply adapter or pull out leaking tubing by pressing collar surrounding tubing while pulling the tubing with your other hand.
3. Inspect to see if plastic tubing is scratched and supply adapter was properly attached.
4. If tubing is scratched, cut off 1/2 inch to 5/8 inch and reinstall.

Leaks on Faucet/Tubing Connection

1. Turn off water supply valve and turn on drinking water faucet to release pressure.
2. Unscrew tubing nut at bottom of faucet. Inspect the tubing. The insert, plastic ring and tubing should not be damaged.
3. Check if insert is in place and tubing is cut squarely and not scratched, cut tubing if necessary to get square smooth end.
4. If the tubing is smooth and square, reconnect tubing by inserting into faucet and tightening nut. The plastic ring should be held tight to the faucet system when the nut is tight.
5. Turn on water supply valve, then close faucet and check for leaks.

NOTE: If leaks persist, or if there are other leaks on system, turn off water supply and call Technical Support 1-800-279-9404.

Leaks Between Cartridge and Filter Housing

1. Turn off cold water supply to system at saddle valve. Close tank valve. Open drinking water faucet to relieve water pressure.
2. Remove the cartridge, inspecting it for damage. Inspect o-rings to make sure they are seated and clean.
3. Insert and twist the cartridge back into the filter housing.
4. Turn on water supply at saddle valve. Open tank valve. Close drinking water faucet after water begins to flow. If leaks persist, call Technical Support.

Leak Between Tank Valve and Storage Tank

1. Turn off water supply to system at the saddle valve. Open faucet to drain storage tank. Let faucet run for 3–5 minutes until it drips.
2. Remove green tubing from tank valve by pressing the collar around the fitting while pulling the tubing with your other hand.
3. Unscrew the tank valve from the storage tank.
4. Place three wraps of plumber tape on the threads of the storage tank.
5. Thread the tank valve onto the top of the tank opening by turning it clockwise until snug.
6. Cut off 1 inch of tubing. Tubing should be cut squarely. Internal and external burrs should be removed. Place a mark on tubing 3/4 inch from end of tubing.
7. Wet the tubing and insert until the mark is flush with the quick-connect fitting.
8. Turn water supply on at the saddle valve and close drinking water faucet.
9. Allow system to pressurize for several hours and check for leaks.
10. Check for leaks after tank is fully pressurized (6–12 hours). If leak persists, call Technical Support.

Leaks at Quick-Connect Fittings

CAUTION The 1/4-inch red tubing connected to the top of the third cartridge has a flow restrictor installed. The system will not operate correctly if the restrictor is removed.

1. Close tank valve, close saddle valve, and open drinking water faucet.
2. Press collar around the quick-connect fitting while pulling the tubing with your other hand.
3. Cut off 1 inch of tubing. Tubing should be cut squarely. Internal and external burrs should be removed. Place a mark on tubing 5/8 inch from end on 1/4-inch tubing or 3/4 inch from end on 3/8-inch tubing.
4. Wet the end and insert tubing until the mark is flush with the quick-connect fitting.
5. Open the saddle valve until it comes to a stop. Open the tank valve and close drinking water faucet. If leaks persist, call Technical Support.

Leaks from Faucet

1. Check to make sure white tubing leading from the drinking water faucet to the drain is as straight as possible (it is usually necessary to cut this line during installation). Any kinks or sags in this drain line will impede the flow of water to the drain.
2. Check to make sure the drain clamp and the drain hole are properly aligned. (Refer to Step 7. Installing the Drain Clamp).
3. Check to make sure there is no foreign matter clogging the drain line or at the drain clamp hole. If leaks persist, call Technical Support.

No Flow or Slow Flow from the Brine (Reject) Line (Less than 6 fl. oz. or 180 milliliters per minute)

NOTE: Before checking brine (or reject) flow, make sure the unit is producing water by turning the valve on the storage tank off and opening the drinking water faucet. Water should drip from faucet.

1. Replace the pre-filter cartridge according to the Changing the Cartridge instructions and recheck the brine (or reject) flow rate.
2. If the pre-filter cartridge is not at fault, the brine (or reject) flow controller could be clogged. Call Technical Support.

High TDS in Product Water

1. If high TDS (Total Dissolved Solids) is detected in the product water, the RO Cartridge Icon will blink red when water is flowing from the faucet. The RO Cartridge may need to be replaced or the reject flow control tubing may be clogged. If this is a new installation, call Technical Support.
2. Otherwise, draw 1 gallon of water from the unit. After 10 minutes, then run water from the faucet and test the water again.
3. If the RO Cartridge Icon is still blinking red, change the RO cartridge and empty the tank.
4. Determine when you last changed the RO Filter Cartridge and call Technical Support.

TROUBLESHOOTING *CONTINUED*

Limited Flow at Drinking Water Faucet

1. Turn off water supply to system at saddle valve.
2. Open the faucet to turn on flow.
3. Unscrew the blue cap at the base of the storage tank to expose air valve. Use a small air compressor or bicycle pump to add air to the storage tank. This will force the water out of the storage tank through the faucet. Continue to add air until no more water comes out of the faucet.
4. Turn off the drinking water faucet.
5. Using an air pressure gauge, adjust the pressure in the storage tank to 5–7psi.
6. Replace the blue cap.
7. Open the saddle valve until it comes to a stop. Let the system run 6–12 hours to fill the tank. A full tank weighs approximately 33 pounds. If performance has not improved, call Technical Support.

Sudden Return of Taste and Odor

If shortly after complete servicing, noticeable taste and odors return, contact Technical Support.

If you are experiencing a problem not listed in this manual, shut off the water supply at the saddle valve and close the tank valve. Call Technical Support.

Arsenic Fact Sheet

Arsenic (abbreviated As) is found naturally in some well water. Arsenic in water has no color, taste or odor. It must be measured by a lab test. Public water utilities must have their water tested for arsenic. You can get the results from your water utility. If you have your own well, you can have the water tested. The local health department or state environmental health agency can provide a list of certified labs. The cost is typically \$15 to \$30. Information about arsenic in water can be found on the Internet at the US Environmental Protection Agency web site: www.epa.gov/safewater/arsenic.html.

There are two forms of arsenic: pentavalent arsenic [also called As(V), As(+5), and arsenate] and trivalent arsenic [also called As(III), As(+3) and arsenite]. In well water, arsenic may be pentavalent, trivalent, or a combination of both. Special sampling procedures are needed for a lab to determine what type and how much of each type of arsenic is in the water. Check with the labs in your area to see if they can provide this type of service.

Reverse osmosis (RO) water treatment systems do not remove trivalent arsenic from water very well. RO systems are very effective at removing pentavalent arsenic. A free chlorine residual will rapidly convert trivalent arsenic to pentavalent arsenic. Other water treatment chemicals such as ozone and potassium permanganate will also change trivalent arsenic to pentavalent arsenic. A combined chlorine residual (also called chloramine) may not convert all the trivalent arsenic. If you get your water from a public water utility, contact the utility to find out if free chlorine or combined chlorine is used in the water system.

The PB4RO-75 system is designed to remove pentavalent arsenic. It will not convert trivalent arsenic to pentavalent arsenic. The system was tested in a lab. Under those conditions, the system reduced 0.30 mg/L (ppm) pentavalent arsenic to 0.010 mg/L (ppm) (the USEPA standard for drinking water) or less. The performance of the system may be different at your installation. Have the treated water tested for arsenic to check if the system is working properly.

The RO component of the PB4RO-75 system must be replaced every 12-24 months to ensure the system will continue to remove pentavalent arsenic. The component identification and locations where you can purchase the component are listed in the installation/operation manual.

⚠ WARNING: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

NOTE: Substances that may be reduced are not necessarily in your water. Filter must be maintained according to manufacturer's instructions, including replacement of filter cartridges.

MAINTENANCE

Contact your water treatment professional for replacement cartridge pricing.

SUGGESTED LIST PRICE REPLACEMENT CARTRIDGES

555612-96 PW-S2500R: \$8.94

555586-96 PW-C500R: \$18.54

555613-96 PW-RO75R: \$44.00


555585-96 PW-C2500R: \$12.16

REPLACEMENT PARTS

For replacement parts contact your local retailer or call Customer Service at 1-800-279-9404.

Item #	Part Number	Description	QTY
1	244877	Storage Tank 3.2 Gal	1
2	357485	Head Assembly, Includes Bracket, Screws, Manifold Assemblies, Tubing and Monitor Circuit Board	1
3	244807	Faucet Base, RO Monitor	1
4	555612-96	Cartridge, Sediment PW-S2500R	1
5	555586-96	Cartridge, Carbon Block PW-C5000R	1
6	555676-96	Cartridge, RO Element, 75 GPD PW-RO75R	1
7	555585-96	Cartridge, GAC PW-C2500R	1
8	244883	Faucet Kit	1
	244835	Faucet Adapter, 7/16-24 UNS x 3/8-inch QC	1
	244783	Valve, RO Tank, 1/4-inch NPT x 1/4-inch QC	1
	1-459-00	Mounting Screw	2
	143495	Lubricant, Silicone, Packet	1
	244796	Drain Clamp, 3/8-inch QC	1
	150646	TDS Test Kit	1
	244797	Adaptor, 1/2-inch FIPS x 1/2-inch MIPS x 1/4-inch QC	1
	244820	Faucet	1
	247117	Label, Pentek Change Reminder	1
9	244794	Tubing 1/4-inch, White PE	1
10	244850	Tubing 1/4-inch O.D., Green	1
11	244875	Tubing 1/4-inch O.D., Red	1
12	244849	Tubing 3/8-inch O.D., Red Faucet Drain	1
13	244848	Tubing 3/8-inch O.D., Blue Permeate	1
14	144925	Nitrate/Nitrite Test Kit	1
*	247163	Manual PP4RO	1

*Not Shown

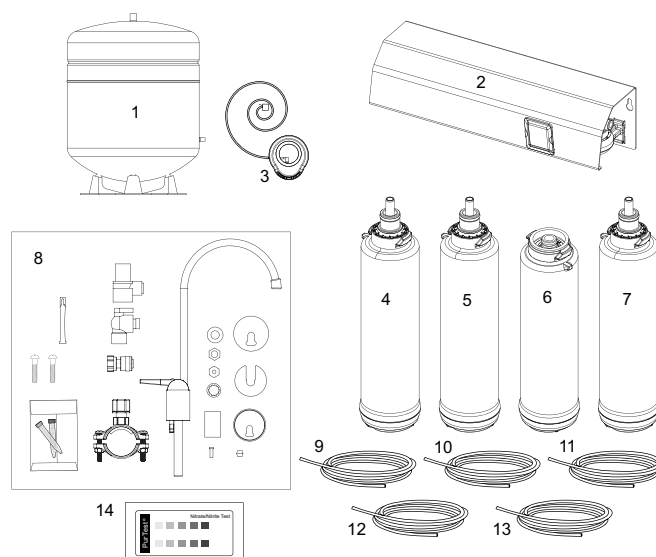

PERFORMANCE DATA

Important Notice: Read this performance data and compare the capabilities of this system with your actual water treatment needs. It is recommended that before installing a water treatment system, you have your water supply tested to determine your actual water treatment needs.

This system has been tested according to NSF/ANSI 58 for the reduction of the substances listed below. The concentration for the indicated substances in water entering the system was reduced to a concentration less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 58.

NOTE: Substances that may be reduced are not necessarily in your water. Filter must be maintained according to manufacturer's instructions, including replacement of filter cartridges.

The tested efficiency rating for this system is 15.80%. Efficiency rating means the percentage of the influent water to the system that is available to the user as reverse osmosis treated water under operating conditions that approximate typical daily usage. The tested recovery rating is 27.40%. Recovery rating means the percentage of the influent water to the membrane portion of the system that is available to the user as reverse osmosis treated water when the system is operated without a storage tank or when the storage tank is bypassed.

PP4R0-75

Substance	Influent Challenge Concentration	Maximum Permissible Product Water Concentration	Reduction Requirements	Average Reduction
Standard 58				
Arsenic V	0.050 mg/L \pm 10%	0.010 mg/L		97.6%
Barium	10.0 mg/L \pm 10%	2.0 mg/L		96.7%
Cadmium	0.03 mg/L \pm 10%	0.005 mg/L		98.2%
Chromium III	0.3 mg/L \pm 10%	0.1 mg/L		97.6%
Chromium VI	0.3 mg/L \pm 10%	0.1 mg/L		97.0%
Copper	3.0 mg/L \pm 10%	1.3 mg/L		98.8%
Cysts*	Minimum 50,000/mL		99.95%	99.99%
Fluoride	8.0 mg/L \pm 10%	1.5 mg/L		96.2%
Lead	0.15 mg/L \pm 10%	0.010 mg/L		99.0%
Nitrate	27.0 mg/L \pm 10%	10.0 mg/L		87.1%
Nitrite	3.0 mg/L \pm 10%	1.0 mg/L		89.3%
Radium 226/228	27pCi/L \pm 10%	5pCi/L		80%
Selenium	0.10 mg/L \pm 10%	0.05 mg/L		98.0%
Total Dissolved Solids	750 mg/L \pm 40 mg/L	187 mg/L		94.9%
Turbidity	11 mg/L \pm 1 NTU	0.5 NTU		99.1%
Standard 42				
Chlorine	2 mg/L		\geq 50%	93.0%

Production Rate: 24.83 gpd



The PP4R0-75 is Tested and Certified by NSF International against NSF/ANSI Standard 42 and 58 for the reduction of substances listed in the table above.

Testing was performed under standard laboratory conditions, actual performance may vary.

CALIFORNIA PROPOSITION 65 WARNING

⚠ WARNING: This product contains chemicals known to the State of California to cause cancer or birth defects or other reproductive harm.

State of California
Department of Public Health
Water Treatment Device
Certificate Number
11 - 2099
Date Issued: October 24, 2011

Trademark/Model Designation	Replacement Elements
Pentair Water PP4R0-75	PW-RO75R (RO Membrane) PW-S2500R (Pre Filters) PW-C5000R (Pre Filters) PW-C2500R (Post Filter)
Manufacturer: Pentair Residential Filtration, LLC	
The water treatment device(s) listed on this certificate have met the testing requirements pursuant to Section 116830 of the Health and Safety Code for the following health related contaminants:	
Microbiological Contaminants and Turbidity	Inorganic/Radiological Contaminants
Cysts Turbidity	Arsenic (pentavalent) ¹ Barium Cadmium Chromium (hexavalent) Chromium (trivalent) Copper Fluoride Lead Radium 226/228 Selenium
Organic Contaminants	
None	
Rated Service Capacity: 1250 gal service cycle Rated Service Flow: 24.8 gpd	
Conditions of Certification: Do not use where water is microbiologically unsafe or with water of unknown quality, except that systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts. ¹ Claims for arsenic reduction shall only be made on water supplies maintaining detectable residual free chlorine at the reverse osmosis (RO) system inlet. Water systems using an in-line chlorinator should provide a minimum of 1 minute chlorine contact time before the RO system.	

*NSF/ANSI Standard 58 certified to reduce cysts such as Cryptosporidium and Giardia by mechanical means.

EPA Est. #082989-CHN-001

LIMITED WARRANTY

Pentair Residential Filtration, LLC, referred to herein as “we” or “us,” manufactures its products (“Products”) and parts (“Parts”) using quality workmanship and materials. Accordingly, Pentair Residential Filtration, LLC warrants to the original purchaser, referred to herein as “you,” that its Products and Parts of the brands listed below will be free from material defects in materials and workmanship under normal use and service beginning on the date of manufacture and continuing for the respective warranty coverage period, and subject to the exclusions, as follows:

FILTRATION	
MODEL LINE	WARRANTY COVERAGE PERIOD
Pentek housings & systems	1 year
Pentek Quick Change systems	1 year as of 1/1/13
Pentek opaque housings (caps & sumps)	5 years
GE® & Pentair membrane elements	1 year
Freshpoint electronic controls and turbine meter	5 years
Freshpoint membrane housings, fittings and solenoid valves	1 year
Replacement Products & Parts	The remainder of the original warranty period or 30 days from the date of replacement, whichever is longer.

EXCLUSIONS FROM THIS LIMITED WARRANTY

This warranty does not cover the following instances:

A. Warranty exclusions applicable to all Products and Parts:

1. Defects not reported to us within the applicable warranty period;
2. Membrane fouling or scaling;
3. Any items manufactured by other companies. Such items may carry warranties offered by the original manufacturers. This includes any service Parts used that are manufactured by other companies, including but not limited to, motors, pistons, seal kits, spacer kits, bypass valves, brine connections & devices, or any other non-Pentair Parts;
4. Problems resulting from failure to comply with installation, operation or maintenance instructions or drawings, or improper installation, operation or maintenance;
5. Damage caused by acts of nature or problems resulting from abuse, misuse, negligence or accident;
6. Problems resulting in whole or in part from alteration, modification or attempted repair of these Products or Parts by any party other than us or a party we have approved in writing;

7. Damage or failure of a Product or Part caused by friction, wear, chemical attack, or debris build-up on Wear Parts. “Wear Parts” include, but are not limited to: pistons, piston rods, seals, spacers, end cap quad rings, and brine valves on all piston operated valves, as well as valve disk flappers on Autotrol valves, and parts requiring replacement under recommended maintenance procedures, such as filter housing O-rings and gaskets;
8. Valves exposed to excessive levels of the following list of contaminants require maintenance as part of a yearly service schedule:
 - a) Ozone: > 0.0 mg/l
 - b) Chlorine or chloramines: > 4mg/l
 - c) Hydrogen Sulfide
 - d) pH: < 6 or > 9
 - e) Iron: in concentrations sufficient to cause scuffing on piston and seal surfaces
 - f) Manganese: in concentrations sufficient to cause scuffing on piston and seal surfaces
 - g) Sand and Suspended Solids: in concentrations sufficient to cause scuffing on piston and seal surfaces;
9. Due to water conditions, some Products or Parts may require maintenance or cleaning during the warranty period. Products or Parts returned due to debris build up, including, but not limited to, plugged filters, are not covered under this warranty;
10. Noncompliance with applicable codes, and ordinances including without limitation, plumbing codes;
11. Damage due to impacts, corrosive liquids, gases, or chemicals;
12. Damage due to hydro-pneumatic or pneumatic use; and
13. Labor to install warranted parts and trip charges including mileage are the responsibility of the system owner.

B. Additional exclusions applicable to Park International and Park Pentair Water, CT, Structural PolyGlass Composite, and FRP Products and Parts:

1. The warranty applies only to original purchaser;
2. Failure to operate a tank in accordance with the limitations stated on the Product label;
3. Failure to properly size a tank to manufacturer recommendations;
4. Use of Products or Parts with water containing sediment or chemicals;
5. Injury to tank or any part thereof caused by exposure to vacuum, freezing, external impact, chemical attack from liquid and gasses, fire, floods or lightning;
6. Liner abrasion caused by faulty distribution systems; and
7. Exposure of plastic surfaces to incompatible lubricants or sealants.

OUR WARRANTY OBLIGATIONS

Should a material defect in workmanship or materials in Products or Parts covered by this warranty become evident during the applicable warranty period, then as our sole obligation and in full satisfaction of any warranty claim, we will issue a credit in the amount of your original purchase price of the Product or Part, or, at our option, repair or replace the defective Product or Part (we will consider, in good faith, customer preference in determining whether to issue a credit or repair or replace). The terms of this warranty are subject to the laws and regulations of the country in which the Product or Part was purchased.

PROCEDURE FOR OBTAINING WARRANTY

- A. We extend warranties solely to direct transactional customers of Pentair Residential Filtration, LLC. All secondary customers of these Products and Parts must submit warranty claims with their direct suppliers.
- B. In order to obtain the benefits of this Limited Warranty, defective Products or Parts must be returned to us as soon as possible after discovery of the material defect, but in no event later than the expiration date of the warranty period provided in this Limited Warranty. The subject Product or Part must be returned to the original point of shipment, freight prepaid, along with a letter stating the model number, serial number, if any, the date of purchase of the item which is claimed to be materially defective and a brief description of the problems encountered. We are not responsible under this Limited Warranty for any cost of shipping or transportation incurred in connection with the return of the Product or Part. Product returned in a manner that does not ensure integrity during shipment may not be covered by warranty.
- C. You shall be responsible for handling all Product and Part warranty claims that are remedied through repair or replacement of the Product or Part, or a refund of the price paid for such Product or Part, with the dealer or end user, as applicable. After you have settled such warranty claims, you shall seek your remedy from us; provided, however, that in no event shall the value of the remedy provided to you, whether in the form of repair, replacement, or account credit, exceed the purchase price paid by you. For Product or Part warranty claims that include property damage or bodily injury, you shall notify us of such claim and we shall work directly with the end user to remedy and settle any such claims in our sole discretion. You shall not, under any circumstances, settle any Product or Part warranty claim involving bodily injury or property damage without our written consent to do so.
- D. In all instances of a Product or Part warranty claim, and prior to providing any warranty remedy, you shall: 1) notify us in writing of the warranty claim within five (5) business days of your receipt of the claim; 2) investigate the claim, which may include taking or requesting digital photographs of the installed Product or Part, verifying proper installation, or other means of validating the claim and verifying the damages claimed; 3) return the defective Product to us; and 4) for those claims involving bodily injury or property damage, cooperate with us and provide requested information for us to complete our investigation.

NO OTHER WARRANTIES. TO THE EXTENT PERMITTED BY APPLICABLE LAW, PENTAIR RESIDENTIAL FILTRATION, LLC DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WITH REGARD TO THE PRODUCT(S), PART(S) AND ANY ACCOMPANYING WRITTEN MATERIALS. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHERS WHICH VARY FROM STATE TO STATE.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES. TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL PENTAIR RESIDENTIAL FILTRATION, LLC BE LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING WITHOUT LIMITATION, LOSS OF TIME, INCONVENIENCE, EXPENSES SUCH AS TELEPHONE CALLS, LABOR OR MATERIAL CHARGES INCURRED IN CONNECTION WITH THE REMOVAL OR REPLACEMENT OF THE PRODUCT(S) OR PART(S), SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES FOR BODILY INJURY, LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS, ARISING OUT OF THE USE OF OR INABILITY TO USE THE DEFECTIVE PRODUCT(S) OR PART(S), EVEN WHERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, PENTAIR RESIDENTIAL FILTRATION, LLC'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS LIMITED WARRANTY SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID FOR THE PRODUCT(S) OR PART(S).

WARRANTIES OR REPRESENTATIONS BY OTHERS. No dealer, distributor or other person has any authority to make any warranties or representations concerning Pentair Residential Filtration, LLC or its Products or Parts. Accordingly, Pentair Residential Filtration, LLC is not responsible for any such warranties or representations.

Buyer

Seller

Date

For Pentair® Product Warranties visit:
Pentair® para las garantías de los productos visite: } **www.pentairaqua.com**
Pour Pentair® garanties produit visitez le site: }



FILTRATION & PROCESS

5730 NORTH GLEN PARK ROAD, MILWAUKEE, WI 53209

P: 262.238.4400 | WWW.PENTAIRAQUA.COM | CUSTOMER CARE: 800.279.9404 | tech-support@pentair.com

All Pentair trademarks and logos are owned by Pentair, Inc. or its affiliates. All other registered and unregistered trademarks and logos are the property of their respective owners. Because we are continuously improving our products and services, Pentair reserves the right to change specifications without prior notice. Pentair is an equal opportunity employer.

247163 REV E AP14 © 2013 Pentair Residential Filtration, LLC. All Rights Reserved.